


Installation Demonstration of BEVS 1503 Intelligent Glossmeter Analysis Software


1. Insert CD into the computer and double click“Setup.exe”

Note:

- 1.1 U disk installation available
- 1.2 Double click“Setup1.msi”if “setup.exe” not compatible

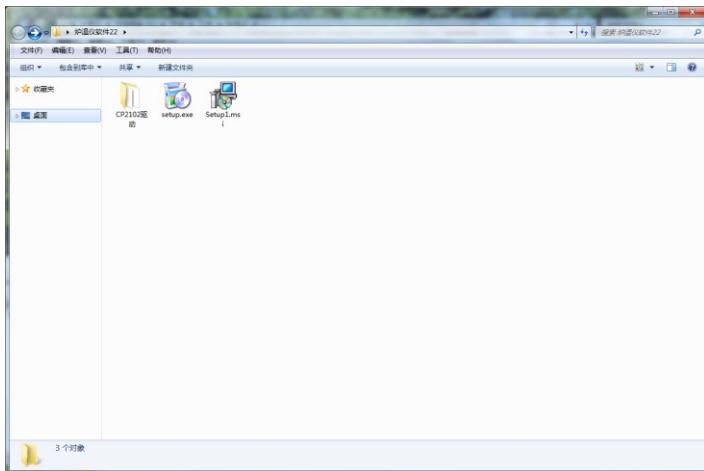


2. Follow the tips to finish the installation. There will be a shortcut named “Trigloss” shown on the desktop.

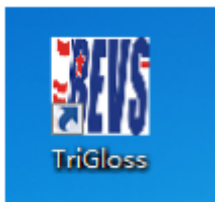


3. Open file “CP2102 Driver” to install USB driver, choose the driver adapting to your PC.

| | | | |
|----------------------------|------------------|-------------|----------|
| CP210x_Windows_Drivers | 2017-07-14 9:23 | 文件夹 | |
| CP210x_Windows_Drivers.zip | 2016-05-12 18:01 | 好压 ZIP 压缩文件 | 3,767 KB |

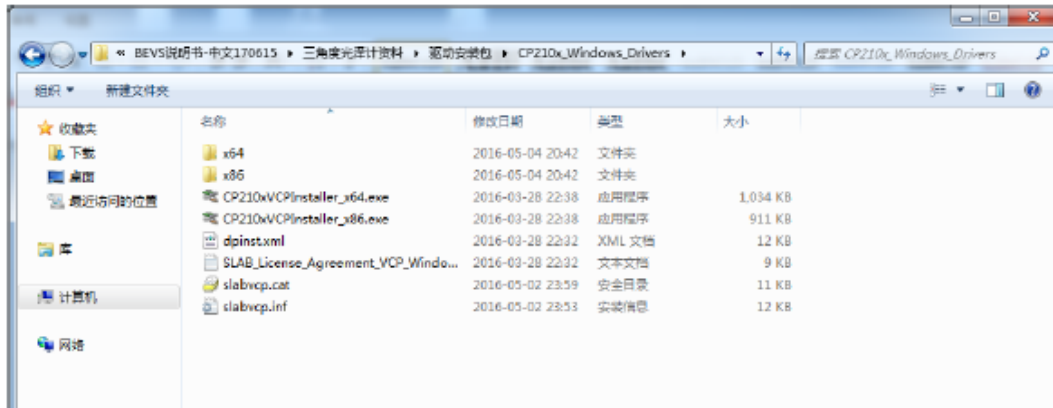

| | | |
|----------------------------|------------------|------|
| CP210xVCPInstaller_x64.exe | 2016-03-28 22:38 | 应用程序 |
| CP210xVCPInstaller_x86.exe | 2016-03-28 22:38 | 应用程序 |

4. Double click the below shortcut to install.

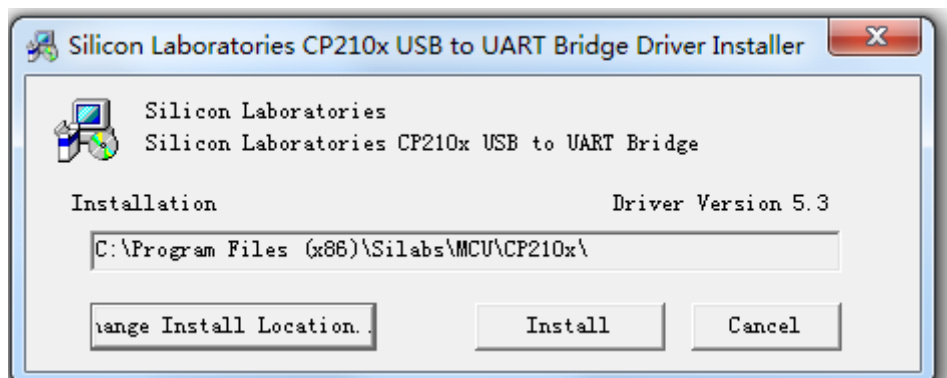

Note:

- 4.1 Click "Change Install Location" to choose the route or stay original.
- 4.2 Click "Install" to continue.
- 4.3 Click "Cancel" to quit.

5. Shutdown the computer, connect the glossmeter to the PC by USB port then power the PC. Check

the glossmeter in the Device Manager.

