

Specification

Zhuhai Shengchang Electronics Co.,Ltd

DALI Dimmable driver - Constant Current Series 30W

. COSCIENCE

■ Features:

- ·Output constant Current
- ·Range 100-265VAC
- ·Built-in active PFC function
- ·Efficiency up to 84%
- ·Protections:short circuit/over load/over temperature
- $\cdot \text{Cooling}$ by free air convection
- $\cdot \text{IP20}$ design for indoor installation.
- •Dimming function: Built in DALI interface dimming function conform to DALI Protocol IEC62386
- •Dimming range from 1% to 100%
- ·Suitable for intelligent LED lighting
- ·Compliance to worldwide safety regulations for lighting
- ·Suitable for dry locations


C € ⊕ ⊕ □ □ ▲ IP20 SELV


	Model	KI-80350-DA	KI-60500-DA	KI-45700-DA	KI-36900-DA	KI-301050-DA	
Output	Rated Current	350mA	500mA	700mA	900mA	1050mA	
	Current Tolerance	±5%					
	DC Voltage	DC 56-80V	DC 42-60V	DC32-45V	DC 25-36V	DC 21-30V	
	Open Circuit Voltage (Max.)	85V	65V	50V	40V	35V	
	Rated Power	28W	30W	31.5W	32.4W	31.5W	
Input	Voltage Range	100-265VAC					
	Frequency Range	47~63HZ					
	Power Factor	PF≥0.98/120VAC PF≥0.95/230VAC P≥0.92/265VAC (Full loading)					
	Full Load Efficiency (Typ.)	84%	84%	84%	84%	84%	
	AC Current (Max.)	0.30A	0.32A	0.33A	0.34A	0.33A	
	Leakage Current	<0.5mA					
Protection	Short Circuit	Protection type: Hiccup mode, recovers automatically after fault condition is removed					
	Over Load	≤ 120%					
	Protection Class:	I					
	Over Temperature	$100^{\circ}C \pm 10^{\circ}C$ shut down o/p voltage, re-power on to recover					
Environment	Working TEMP.	-40 - +60℃					
	Working Humidity	20 - 90%RH,non-condensing					
	Storage TEM.,Humidity	-40 - +80℃,10 - 95%RH					
	TEMP.Coefficient	±0.03%/°C (0-50°C)					
	Vibration	10 - 500Hz, 2G 12min./1 cycle, period for 72min.each along X,Y,Z axes.					
Safety & EMC	Safety Standards	EN61347-1 EN61347-2-13 IP20					
	Withstand Voltage	I/P-O/P:3.75KVAC I/P-FG:1.88KVAC O/P-FG:0.5KVAC					
	Isolation Resistance	I/P-O/P I/P-FG O/P-FG: 100MΩ/500VDC/25℃/70%RH					
	EMC Emission	EN55015,EN61000-3-2 (≥60%load)					
	EMC Immunity	EN61000-4-2,3,4,5,6 ,11,EN61547,A light industry level (surge4KV)					



Others	Weight	0.45Kg			
	Dimension	180*60*35mm (L*W*H)			
	Packing	355*215*215mm/20pcs/CTN			
	1. All parameters NOT specially mentioned are measured at 230VAC input , rated load and 25 $^\circ$ C of				
Notes	ambient temperature.				
	2. Tolerance: includes set up tolerance, line regulation and load regulation .				
	3. The power supply is considered as a component that will be operated in combination with final				
	Equipment. Since EMC performance will be affected by the complete installation, the final				
	equipment manufactures must be-qualify EMC Directive on the complete installation again.				

Mechanical Specification

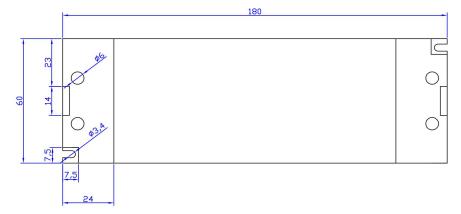



∎Label



※Input with Live Wire(L) Neutral Wire (N)

*Output LED SEC output Positive(LED+),output negative(LED-).Connected to LED Lamps.

Signal Dimming DA1, DA2 (No polar) connected to the BUS of the DALI Master.

*Suggested wire diameter: Input 0.75-4mm²; Output: 0.5-2.5mm²


*Please make sure you connect these correctly otherwise your product will not function correctly and could be damaged.

*Note: Any other requests we can customized.



Dimming Operation

Operation Reference No.1:

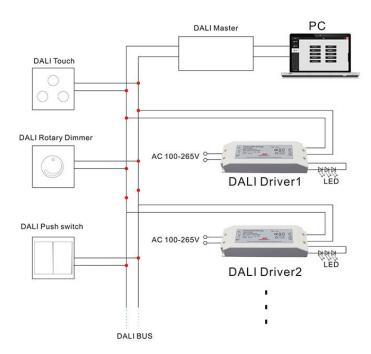


*Please refer to Diagram 1. Connect the Dali signal line to the Dali bus of the controller (the Dali Master). After Dali Master scanning and address assignment, the driver can be successfully dimmed.

*Notice:In the market, some DALI controllers has bus-powered functions .If not,please add an extra power supply.(DALI Power).

%Any incorrect connecting of signal line and output line would damage the master.

Operation Reference No.2:

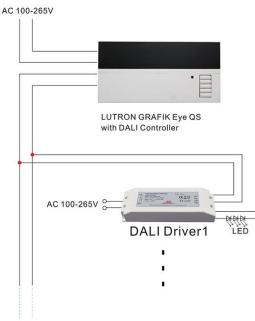


DALI BUS

*Please refer to Diagram 2. Connect the Dali signal line to the Dali controller.




Operation Reference No.3:

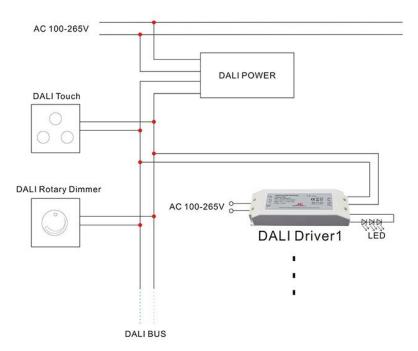

%Please refer to Diagram 3 Connect the Dali signal line to the Dali dimmers.

Derating Curve

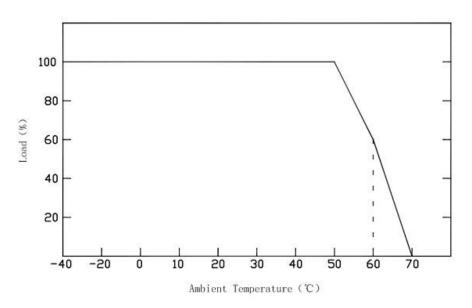

%To extend their life, please refer to the Derating Curve and derate according to the temperature.

Instruction:

1)This driver should be installed by qualified and professional person;

2)Please make sure the transformer is installed with adequate ventilation around it to allow for heat dissipation.3)Ensure that wiring is correct before test in order to avoid light and power supply damage;

4) If driver Cannot work normally, don't maintain privately; Have any question, please contact Shengchang.



Any other question please feel free to contact ZHUHAI SHENGCHANG ELECTRONICS CO., LTD