



### **■** Features:

- ·Output constant Current
- ·Range 100-265VAC
- ·Built-in active PFC function
- ·Efficiency up to 89%
- ·Protections:short circuit/over load/over temperature
- ·Cooling by free air convection
- ·IP66 design for indoor and outdoor installation.
- ·Dimming function: Built in DALI interface dimming function conform to DALI Protocol IEC62386
- Dimming range from 1% to 100%
- ·Suitable for intelligent LED lighting
- ·Compliance to worldwide safety regulations for lighting
- ·Suitable for dry and wet locations

# **■**Specification




Model		KI-802500-DA	KI-702800-DA	KI-653100-DA	KI-366500-DA
Output	Rated Current	2500mA	2800mA	3100mA	6500mA
	Current Tolerance	±5%			
	DC Voltage	56-80V	49-70V	45-65V	25-36V
	Open Circuit Voltage (Max.)	85V	75V	70V	40V
	Rated Power	200W	196W	201.5W	234W
Input	Voltage Range	100-265VAC			
	Frequency Range	47~63HZ			
	Power Factor	PF≥0.98/120VAC PF≥0.98/230VAC PF≥0.95/265VAC (Full loading)			
	Full Load Efficiency (Typ.)	89%	89%	89%	89%
	AC Current (Max.)	1.96A	1.92A	1.97A	2.29A
	Leakage Current	<0.5mA			
Protection	Short Circuit	Protection type: Hiccup mode, recovers automatically after fault condition is removed			
	Over Load	≤ 120%			
	Protection Class:	I			
	Over Temperature	100°C±10°C shut down o/p voltage, re-power on to recover			
Environment	Working TEMP.	-40 - +60℃			
	Working Humidity	20 - 95%RH,non-condensing			
	Storage TEM., Humidity	-40 - +80℃,10 - 95%RH			
	TEMP.Coefficient	±0.03%/℃ (0 - 50℃)			
	Vibration	10 - 500Hz, 5G 12min./1 cycle, period for 72min.each along X,Y,Z axes.			
Safety & EMC	Safety Standards	EN61347-1 EN61347-2-13 IP66			
	Withstand Voltage	I/P-O/P:3.75KVAC I/P-FG:1.88KVAC O/P-FG:0.5KVAC			
	Isolation Resistance	I/P-O/P I/P-FG O/P-FG: 100MΩ/500VDC/25℃/70%RH			
	EMC Emission	EN55015,EN61000-3-2 (≥60%load)			
	EMC Immunity	EN61000-4-2,3,4,5,6 ,11,EN61547,A light industry level (surge4KV)			



Others	Weight	1.6Kg			
	Dimension	256*78*47mm (L*W*H)			
	Packing	340*280*185mm/10pcs/CTN			
Notes	1. All parameters NOT specially mentioned are measured at 230VAC input , rated load and 25°C of				
	ambient temperature.				
	2. Tolerance: includes set up tolerance, line regulation and load regulation .				
	3. The power supply is considered as a component that will be operated in combination with final				
	Equipment. Since EMC performance will be affected by the complete installation, the final				
	equipment manufactures must be-qualify EMC Directive on the complete installation again.				

# ■ Mechanical Specification

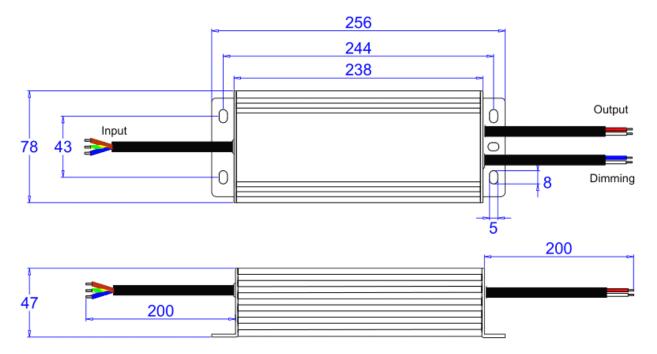

#### ■ Label



- ※Input Rubber cable H05RN-F 3G 1.0mm², the green/yellow cable connect with (FG) ,Brown with AC (L),Blue with AC(N)
- \*\*Signal Rubber cable H05RN-F 2\*0.75mm², Blue and White is DA1, DA2 (No polar). Connected to the BUS of the DALI Master.
- \*\*Output rubber cable H05RN-F 2\*1.0mm²,Red is output (V+) Positive,Black is output (V-) negative. Connected to LED Lamps.


Please make sure you connect these correctly otherwise your product will not function correctly and could be damaged.

\*Note: Any other requests we can customized.




## **■ Dimming Operation**

## **Operation Reference No.1:**

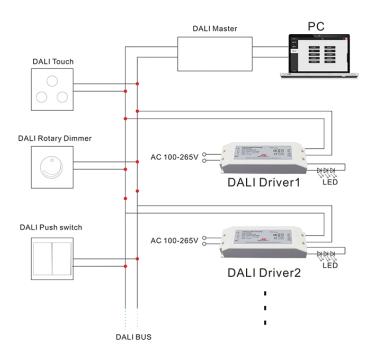

- \*\*Please refer to Diagram 1. Connect the Dali signal line to the Dali bus of the controller (the Dali Master). After Dali Master scanning and address assignment, the driver can be successfully dimmed.
- \*Notice:In the market, some DALI controllers has bus-powered functions. If not,please add an extra power supply.(DALI Power).
- \*Any incorrect connecting of signal line and output line would damage the master.


## **Operation Reference No.2:**

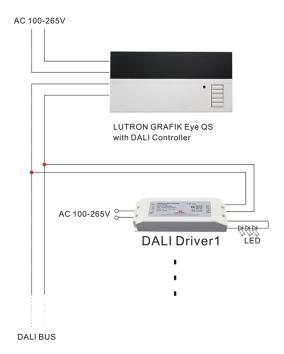

\*\*Please refer to Diagram 2. Connect the Dali signal line to the Dali controller.




## **Operation Reference No.3:**

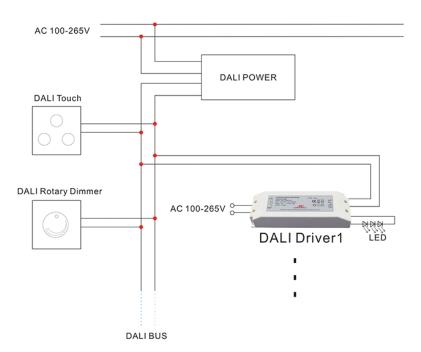

\*\*Please refer to Diagram 3 Connect the Dali signal line to the Dali dimmers.

## ■ Derating Curve

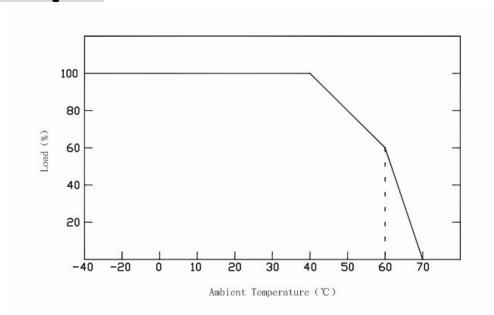

\*\*To extend their life, please refer to the Derating Curve and derate according to the temperature.

### ■ Instruction:

- 1)This driver should be installed by qualified and professional person;
- 2)Please make sure the transformer is installed with adequate ventilation around it to allow for heat dissipation.
- 3)Ensure that wiring is correct before test in order to avoid light and power supply damage;
- 4)If driver Cannot work normally, don't maintain privately; Have any question, please contact Shengchang.

Any other question please feel free to contact ZHUHAI SHENGCHANG ELECTRONICS CO.,LTD